



Sony Vaio PCG-31311L Keyboard Replacement

This guide will show how to remove the keyboard from the device.

Written By: Tyler






TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Keyboard

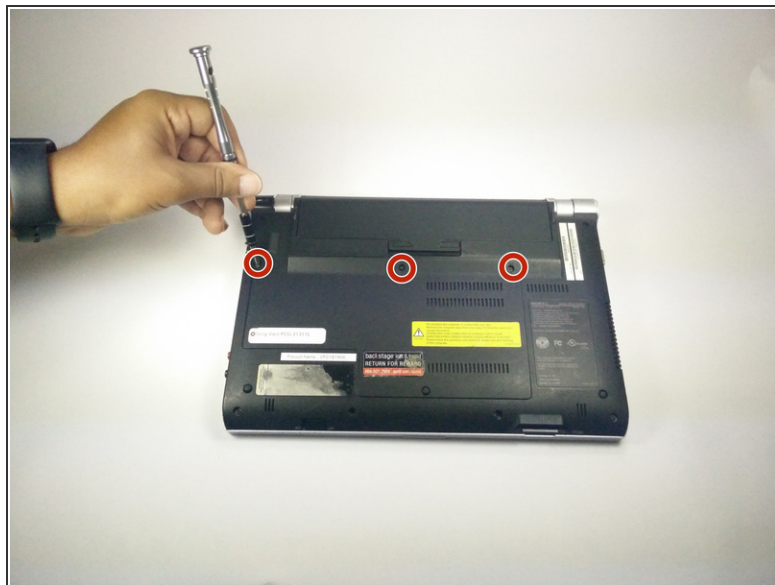


- Start with device closed, powered off, and upside down.
- Locate 3 screws on the bottom plate and unscrew
- ⓘ These screws do not detach from the bottom plate.

Step 2





- Use a plastic opening tool to pry up on the plate and remove from device.

Step 3

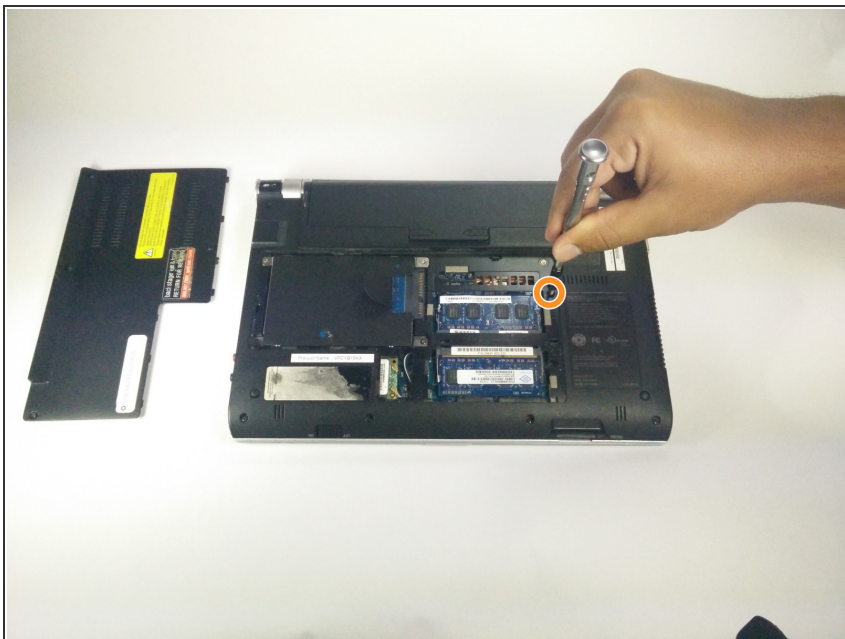


- Locate screw labeled "KB" and remove.

Step 4

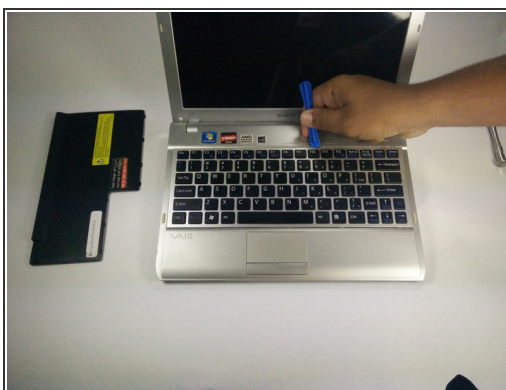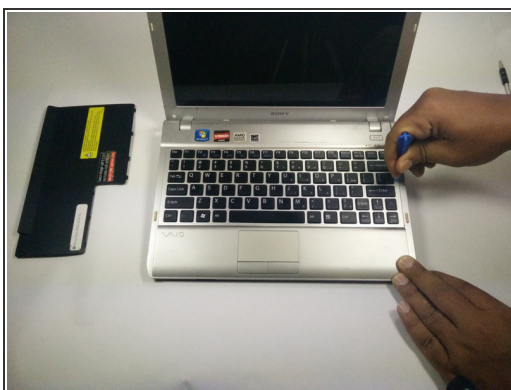

- Use a plastic opening tool to pry around the edge of the keyboard.

Step 5

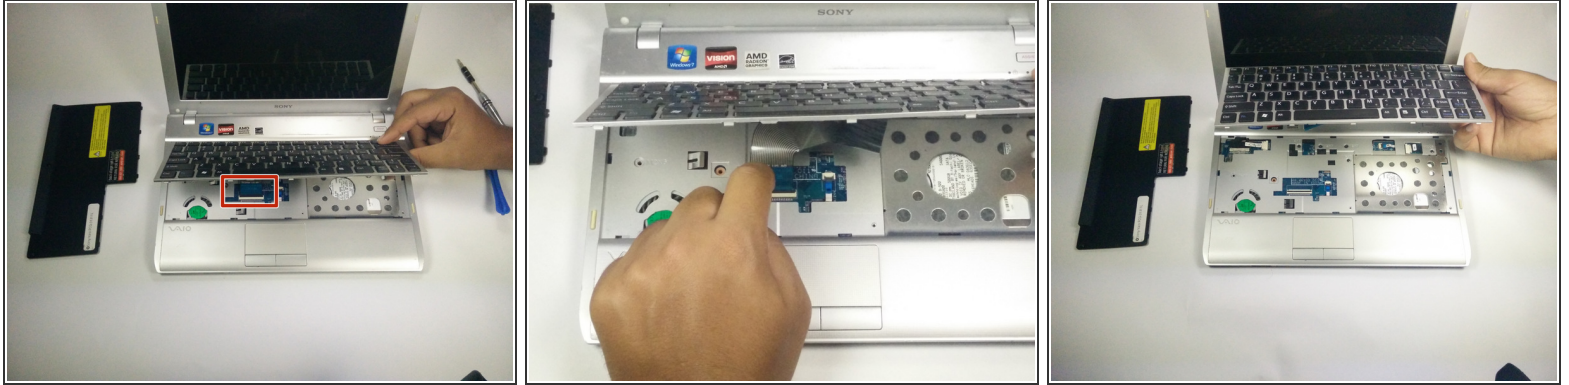

- Once detached, tilt the keyboard forward, exposing a blue ribbon cable.
- Place finger on black tab and pull back. Then, give a gentle tug on the ribbon cable and it will detach.
- Once the ribbon cable has been detached, lift the keyboard away from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 07:35:29 PM.